HD7692, HD7690, HD7686

PHILIPS

1

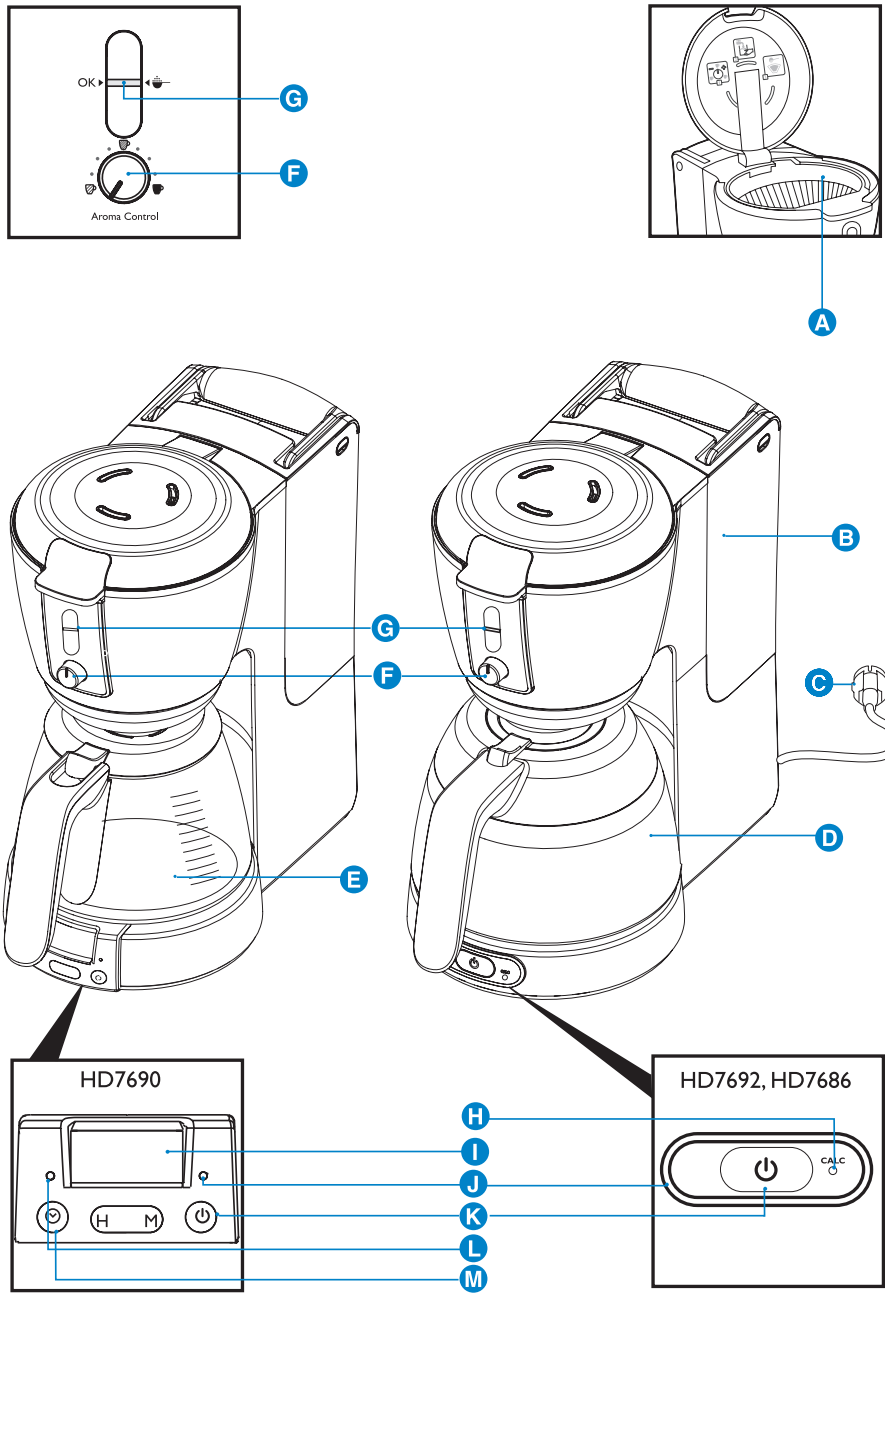
OK
Aroma Control
G
F
A
B
C
D
E
HD7690
H M
HD7692, HD7686
CALC
H
I
J
K
L
M

ENGLISH 4
DANSK 9
DEUTSCH 14
ΕΛΛΗΝΙΚΑ 20
ESPAÑOL 26
SUOMI 31
FRANÇAIS 36
ITALIANO 42
NEDERLANDS 48
NORSK 54
PORTUGUÊS 59
SVENSKA 65
TÜRKÇE 70

HD7692, HD7690, HD7686

Important

Read this user manual carefully before you use the appliance and save it for future reference.

- Check if the voltage indicated on the appliance corresponds to the local mains voltage before you connect the appliance.
- Do not use the appliance if the mains cord, the plug or the appliance itself is damaged.
- If the mains cord is damaged, you must have it replaced by Philips, a service centre authorised by Philips or similarly qualified persons in order to avoid a hazard.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.
- Keep the cord out of the reach of children. Do not let the mains cord hang over the edge of the table or worktop on which the appliance stands.
- Do not place the appliance on a hot surface and do not let the mains cord come into contact with hot surfaces.
- Never immerse the appliance in water or any other liquid.
- Unplug the appliance if problems occur during brewing and before you clean it.

Thermos jug (HD7692 only)

- Do not disassemble the thermos jug.
- To prevent water from entering the thermos jug, never immerse the jug in water or any other liquid.
- The thermos jug is not dishwasher-proof.
- When the jug is filled with coffee, keep it in upright position to prevent leakage.
- During brewing, the lower part of the appliance and the bottom of the thermos jug become hot.

Electromagnetic fields (EMF)

This Philips appliance complies with all standards regarding electromagnetic fields (EMF). If handled properly and according to the instructions in this user manual, the appliance is safe to use based on scientific evidence available today.

General description (Fig. 1)

A Filter holder
B Detachable water tank
C Mains plug
D Thermos jug (HD7692 only)
E Glass jug
F Aroma Control knob
G Aroma Control indicator
H Descaling light (HD7692/HD7686 only)
I Display (HD7690 only)
J Power-on light
K On/off button
L Timer light (HD7690 only)
M Timer button (HD7690 only)

Preparing for use

1 Put the appliance on a flat and stable surface.

2 Put the plug in an earthed wall socket.

3 You can store excess cord by pushing it into the opening in the back of the coffee maker (Fig. 2).

Setting the clock (HD7690 only)

1 After you have put the plug in the wall socket, the word 'SET' appears on the display (Fig. 3).

2 Press the 'H' button one or more times to set the hour (Fig. 4).
◗ The display shows the set hour (e.g. 7:00).

3 Press the 'M' button one or more times to set the minutes (Fig. 5).
◗ The display shows the set minutes (e.g. 7:20).

Flushing the appliance

1 Remove the water tank and fill it with fresh, cold tap water (Fig. 6).

HD7692 only: When you operate the appliance without ground coffee, do not fill the water tank beyond the 8-cup mark, otherwise the thermos jug will overflow.

2 Put the water tank back onto the appliance (Fig. 7).
Do not put a filter and ground coffee in the filter holder.

3 Press the on/off button to switch on the appliance.
◗ The power-on light goes on.

4 Let the appliance operate until the water tank is empty.
◗ HD7692: The appliance switches off automatically after brewing.

5 HD7690/HD7686: Press the on/off button to switch off the appliance.
The appliance switches off automatically after 2 hours.

6 Clean the jug and the filter holder (see chapter 'Cleaning').

7 Let the appliance cool down for at least 3 minutes before you start brewing coffee.

Thermos jug (HD7692 only)

Note: Always preheat the thermos jug with hot tap water before you start brewing coffee.

1 Rinse the thermos jug with hot tap water to preheat it (Fig. 8).
To obtain the tastiest and hottest coffee, brew at least half a jug of coffee.

2 To pour out coffee, turn the lid to the right by its fin until the arrow on the jug points towards the 'pour' symbol on the lid. Always close the lid after pouring coffee to keep the coffee hot (Fig. 9).

3 To close the lid, turn it to the left by its fin until the arrow on the jug points towards the 'closed/brewing' symbol on the lid (Fig. 10).

4 To remove the lid from the thermos jug, turn it to the left by its fin until the arrow on the jug points towards the 'remove lid' symbol on the lid (Fig. 11).

Using the appliance

Brewing coffee

This coffee maker is equipped with Aroma Control, which allows you to adjust the strength of the coffee to your own taste. Aroma Control also helps you determine the right balance between pre-ground coffee and water.

Note: When you use Aroma Control, always fill the water tank with water before you put ground coffee in the filter.